

MATERIAL LIST

1 - 4' x 8' x $\frac{3}{8}$ " SMART SIDING

4 - $1\frac{1}{2}$ " x $1\frac{1}{2}$ " x 8' WHITE WOOD

1 - 4" x 4" x 8' PRESSURE TREATED POST

1 - $\frac{3}{4}$ " x 3" x 10' WHITE WOOD

2 $3\frac{1}{2}$ " BUTT HINGES

1 $19\frac{3}{4}$ " x 30" x $\frac{1}{8}$ " PLEXI GLASS

1 4" SCREW EYE & HOOK SCREEN DOOR LATCH

1 TUBE CLEAR SILICONE CAULK

1 TUBE WHITE EXTERIOR PAINTABLE CAULK
EXTERIOR PAINT

10' RUBBER WEATHERSTRIP FOR DOOR

1# NO 8 BRIGHT FINISH NAILS - FOR FRAMEWORK



1# NO 6 GALVANIZED CASEING NAILS FOR SIDING
SHELF AND BOTTOM

BASIC DIRECTIONS


- ① CUT OUT ALL PIECES AS PER PLAN
- ② NAIL FRAMEWORK TOGETHER
AS PER FRAMEWORK DRAWING
- ③ NAIL ON SHELF AND BOTTOM
FROM TOP
- ④ NAIL SIDES ON TO FRAMEWORK
- ⑤ NAIL ON BACK
- ⑥ NAIL ON FRONT TOP & BOTTOM PIECES
- ⑦ FINAL MEASURE THE TWO SMALL FRONT
PIECES CUT & INSTALL
- ⑧ NAIL ON TOP
- ⑨ BUILD DOOR & INSTALL
- ⑩ CAULK ALL EDGES OF BOX WITH THE
EXTERIOR PAINTABLE CAULK
- ⑪ PAINT BOX THEN INSTALL DOOR
- ⑫ SINK 4" X 4" X 8' POST 2' INTO GROUND
HANG BOX ON POST & SCREW TO IT.

BLESSING BOX PLAN


SIDES - 2

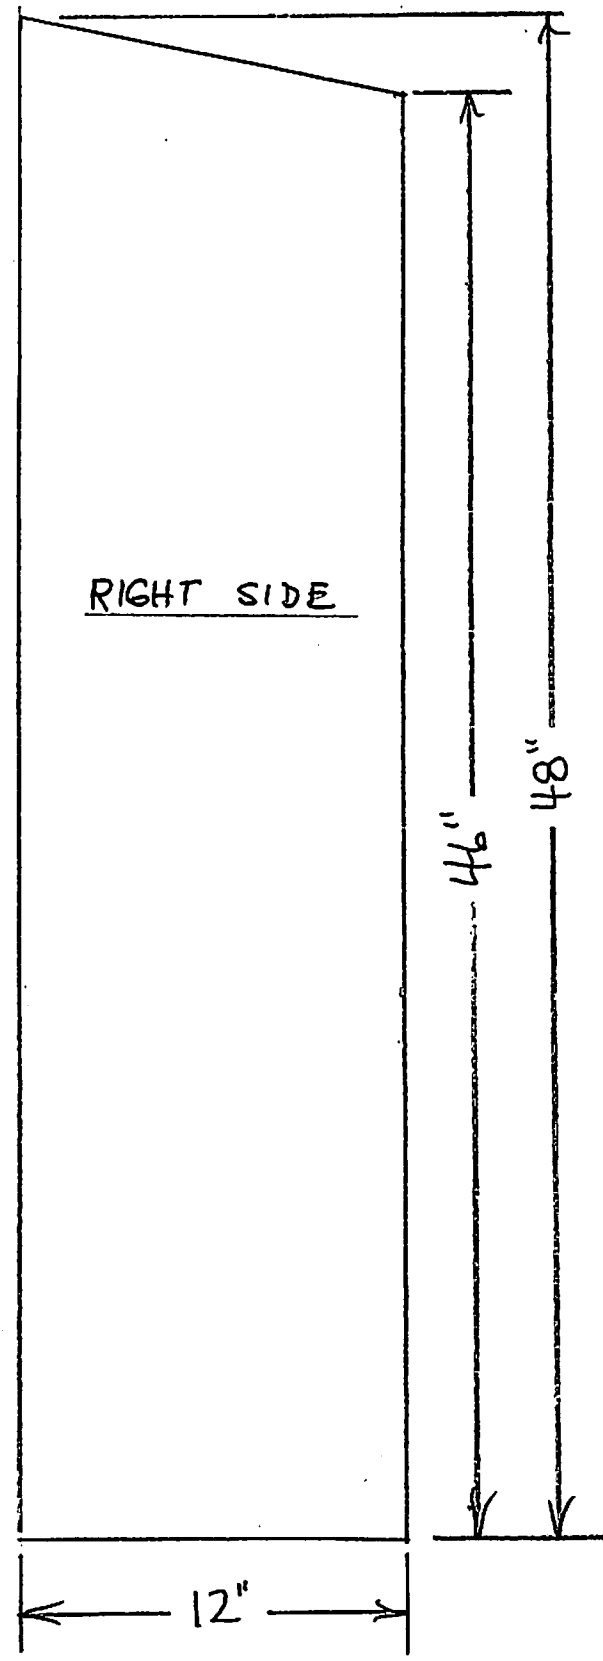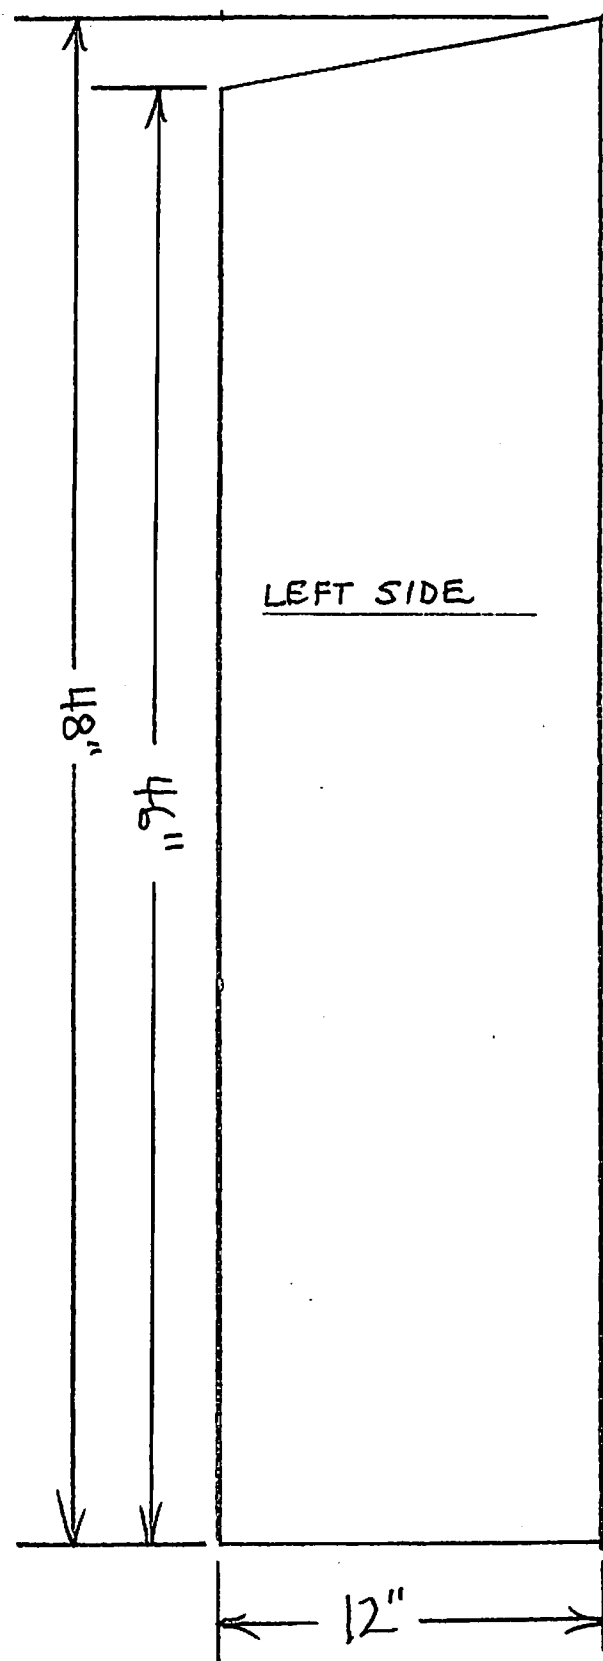


BACK 1

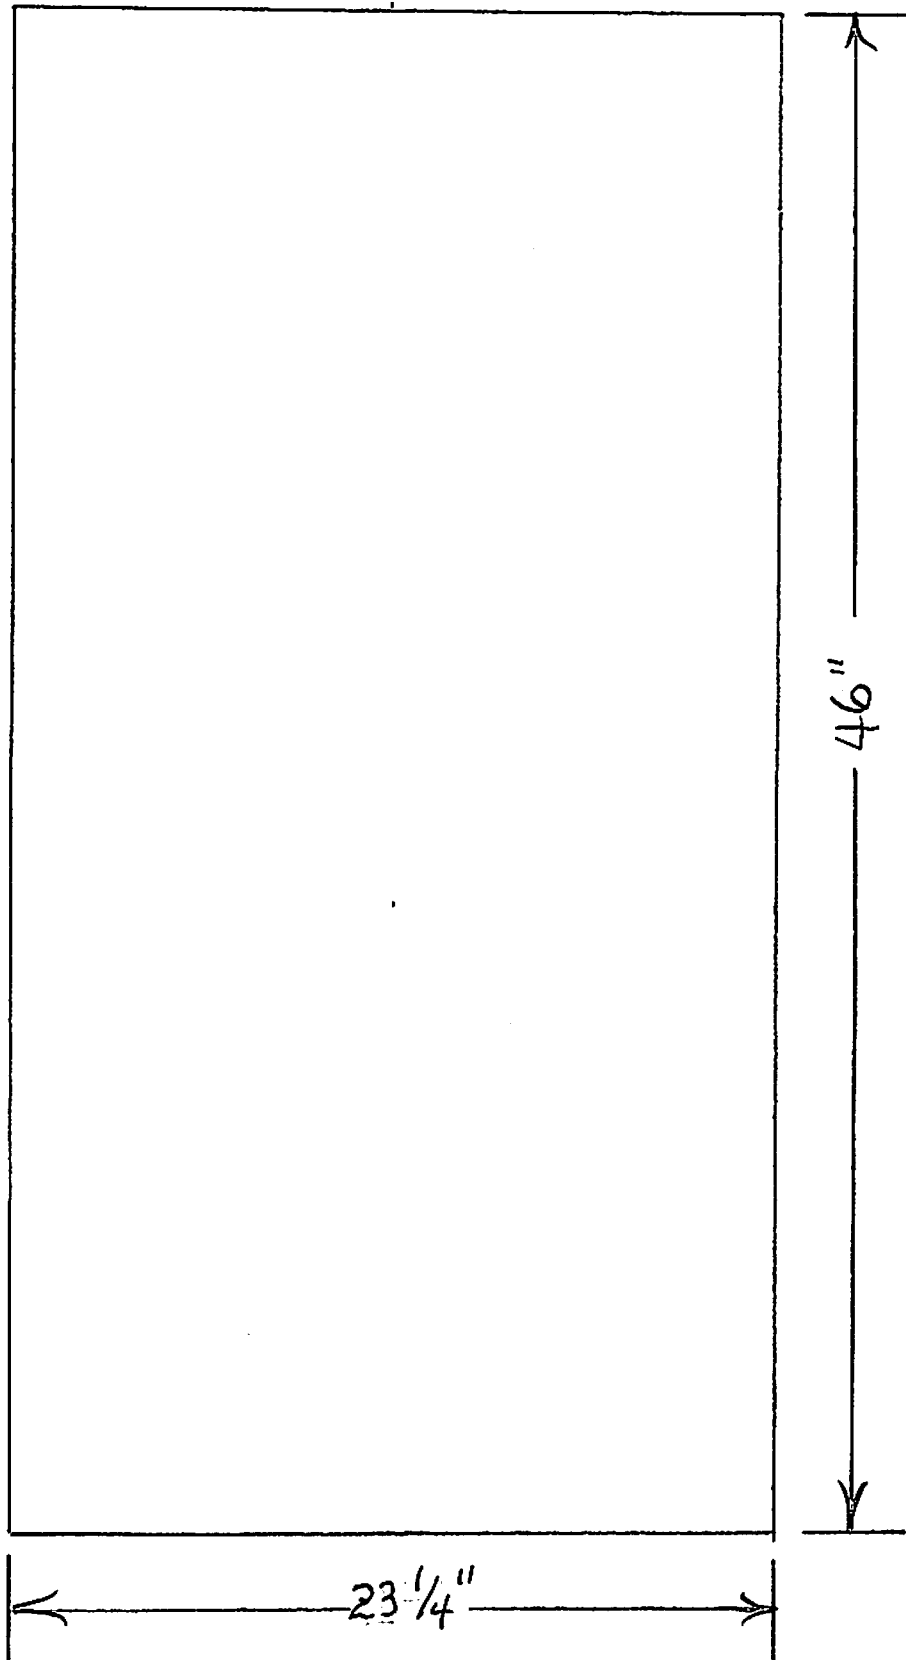

FRONT 4 PIECES

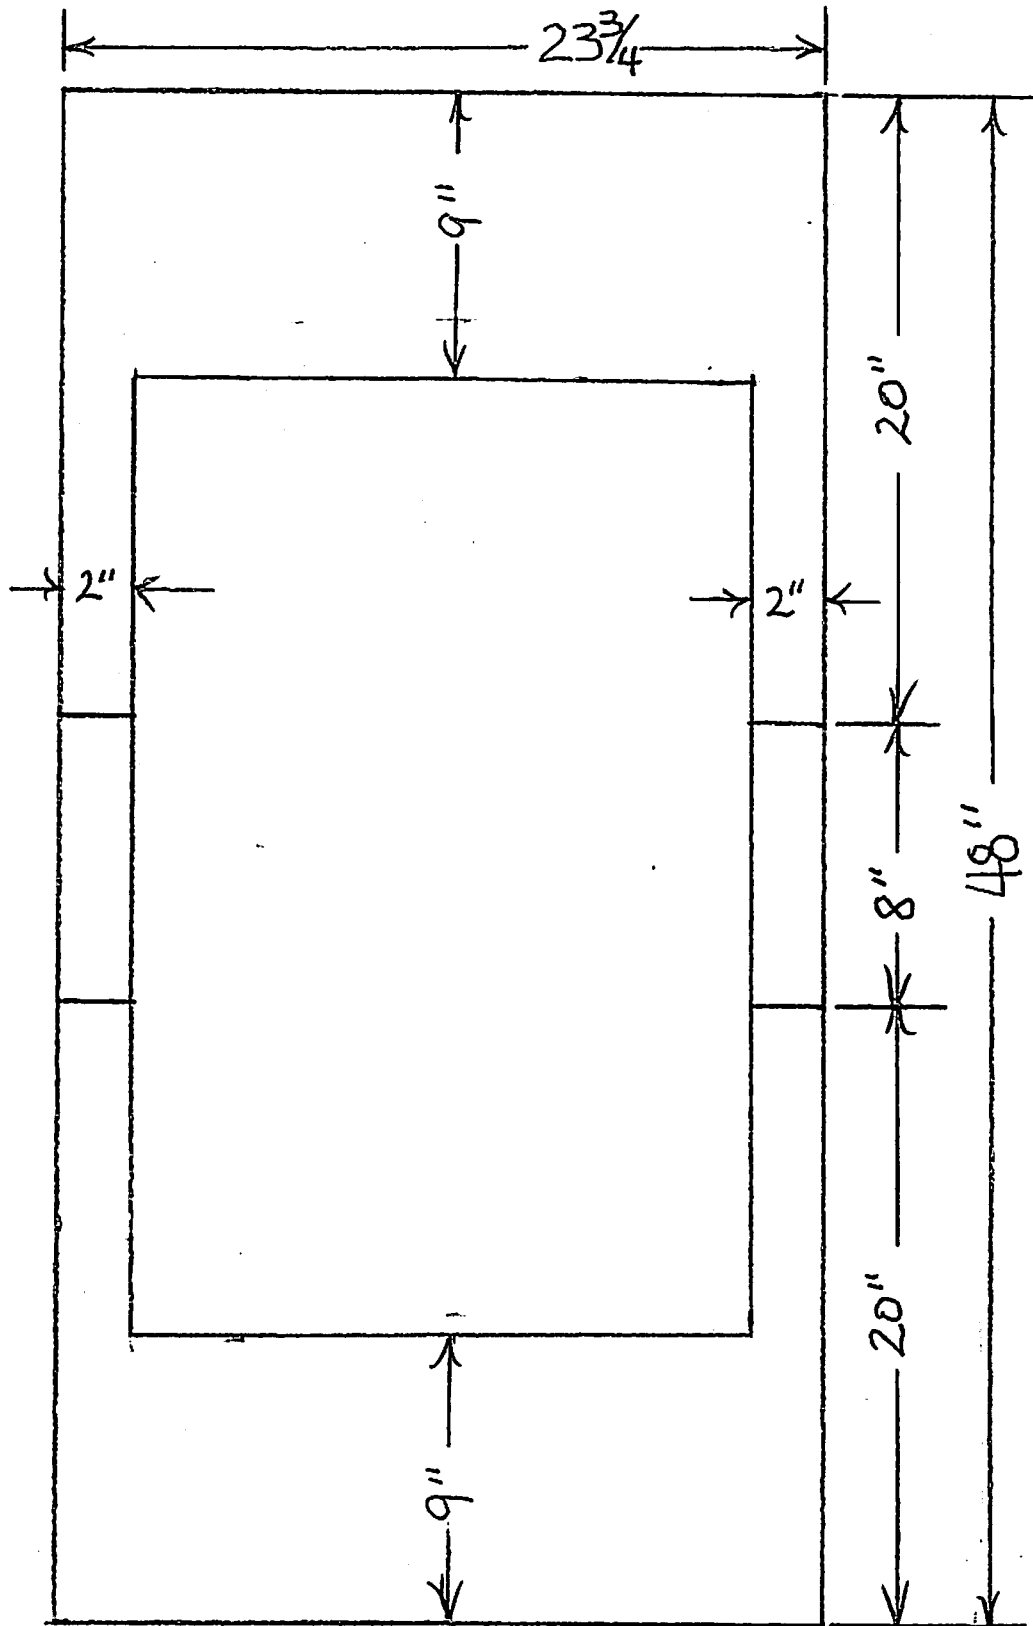

$1\frac{1}{2}" \times 1\frac{1}{2}"$ FRAME WORK


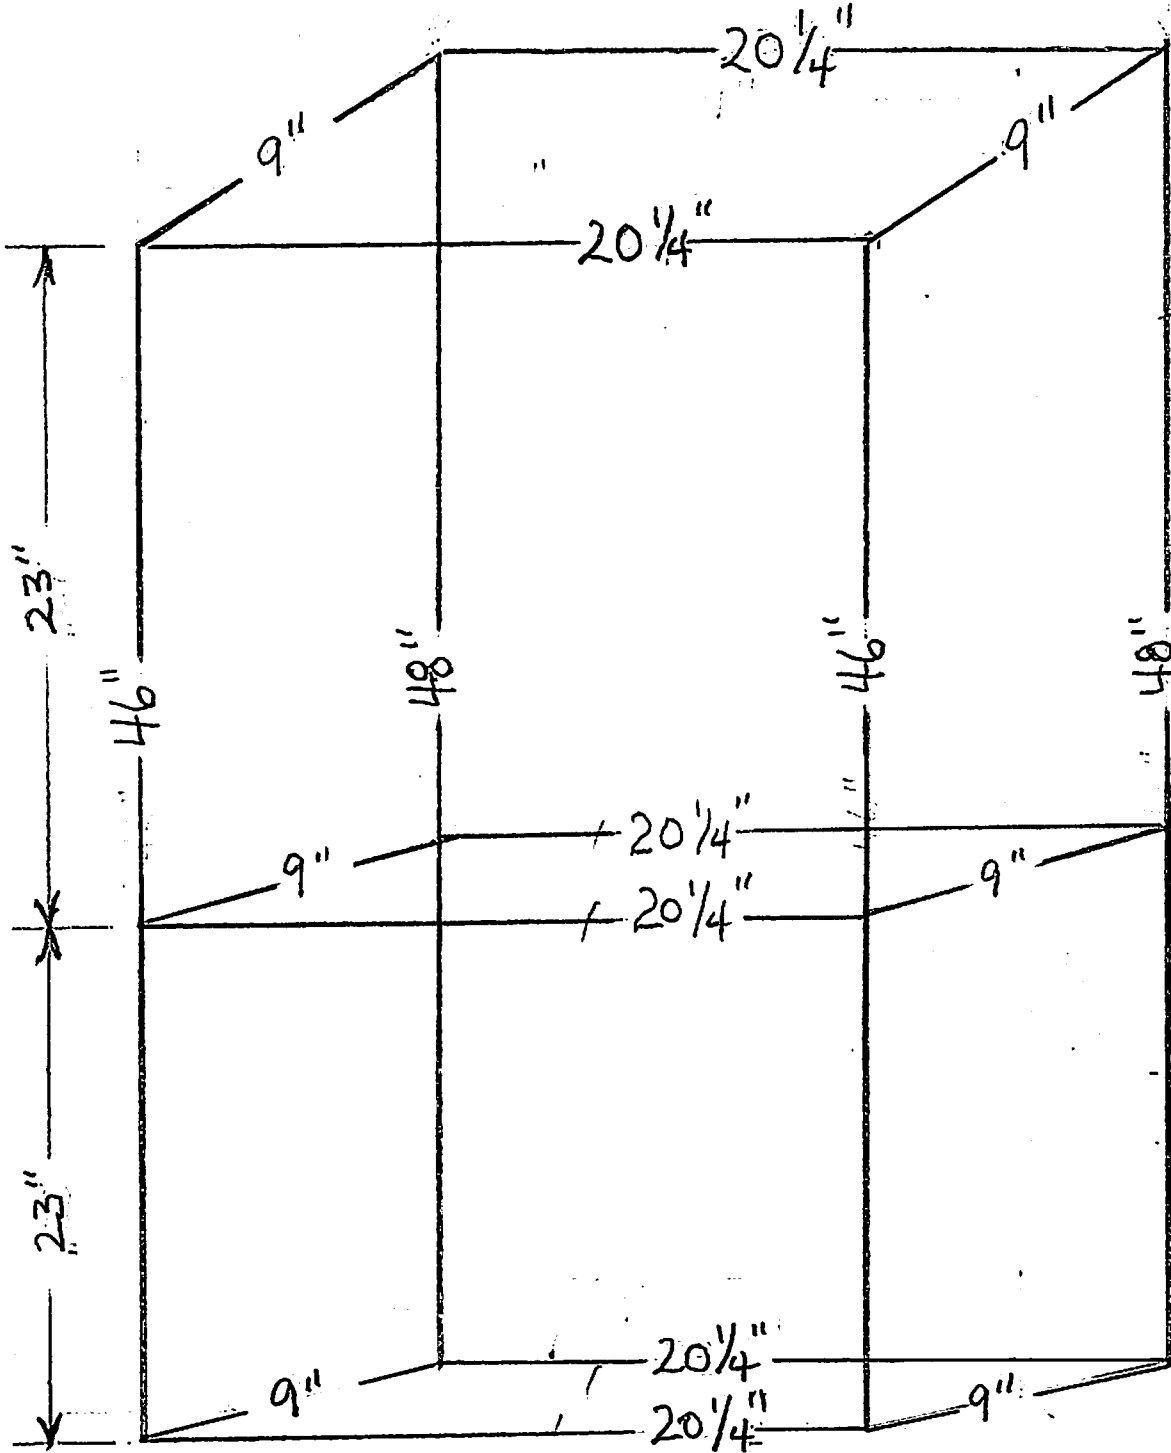


USE $1\frac{1}{2}" \times 1\frac{1}{2}"$ WHITE WOOD

CUT 2 PCS 48"
 2 PCS 46"
 6 PCS 20 1/4"
 6 PCS 9"


FRAME TOP VIEW


5

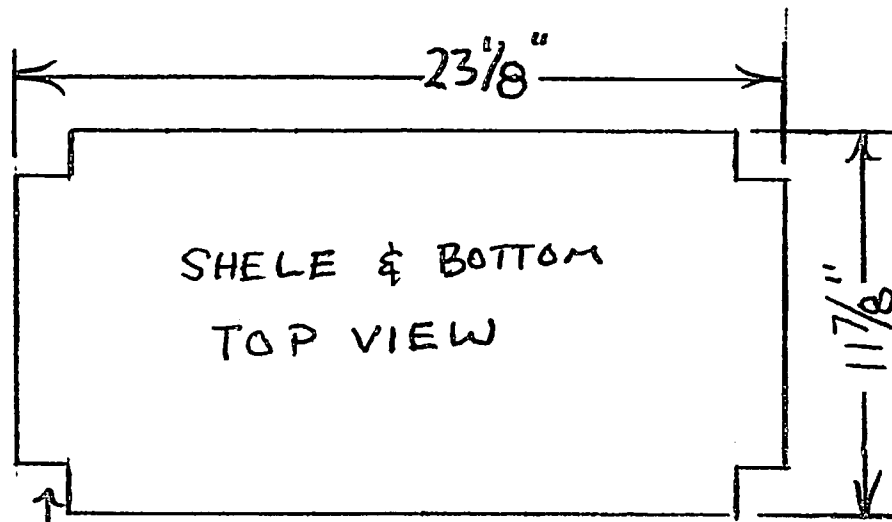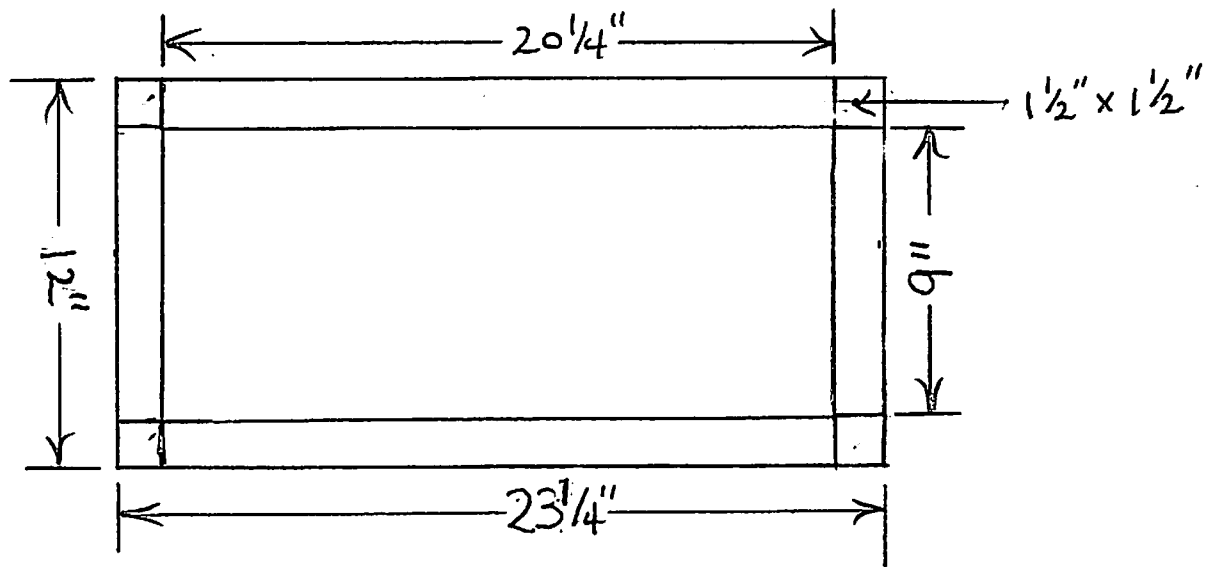

CUT OUT $1\frac{5}{8}" \times 1\frac{5}{8}"$
ON ALL FOUR CORNERS

4' X 8' CUTOUT GUIDE

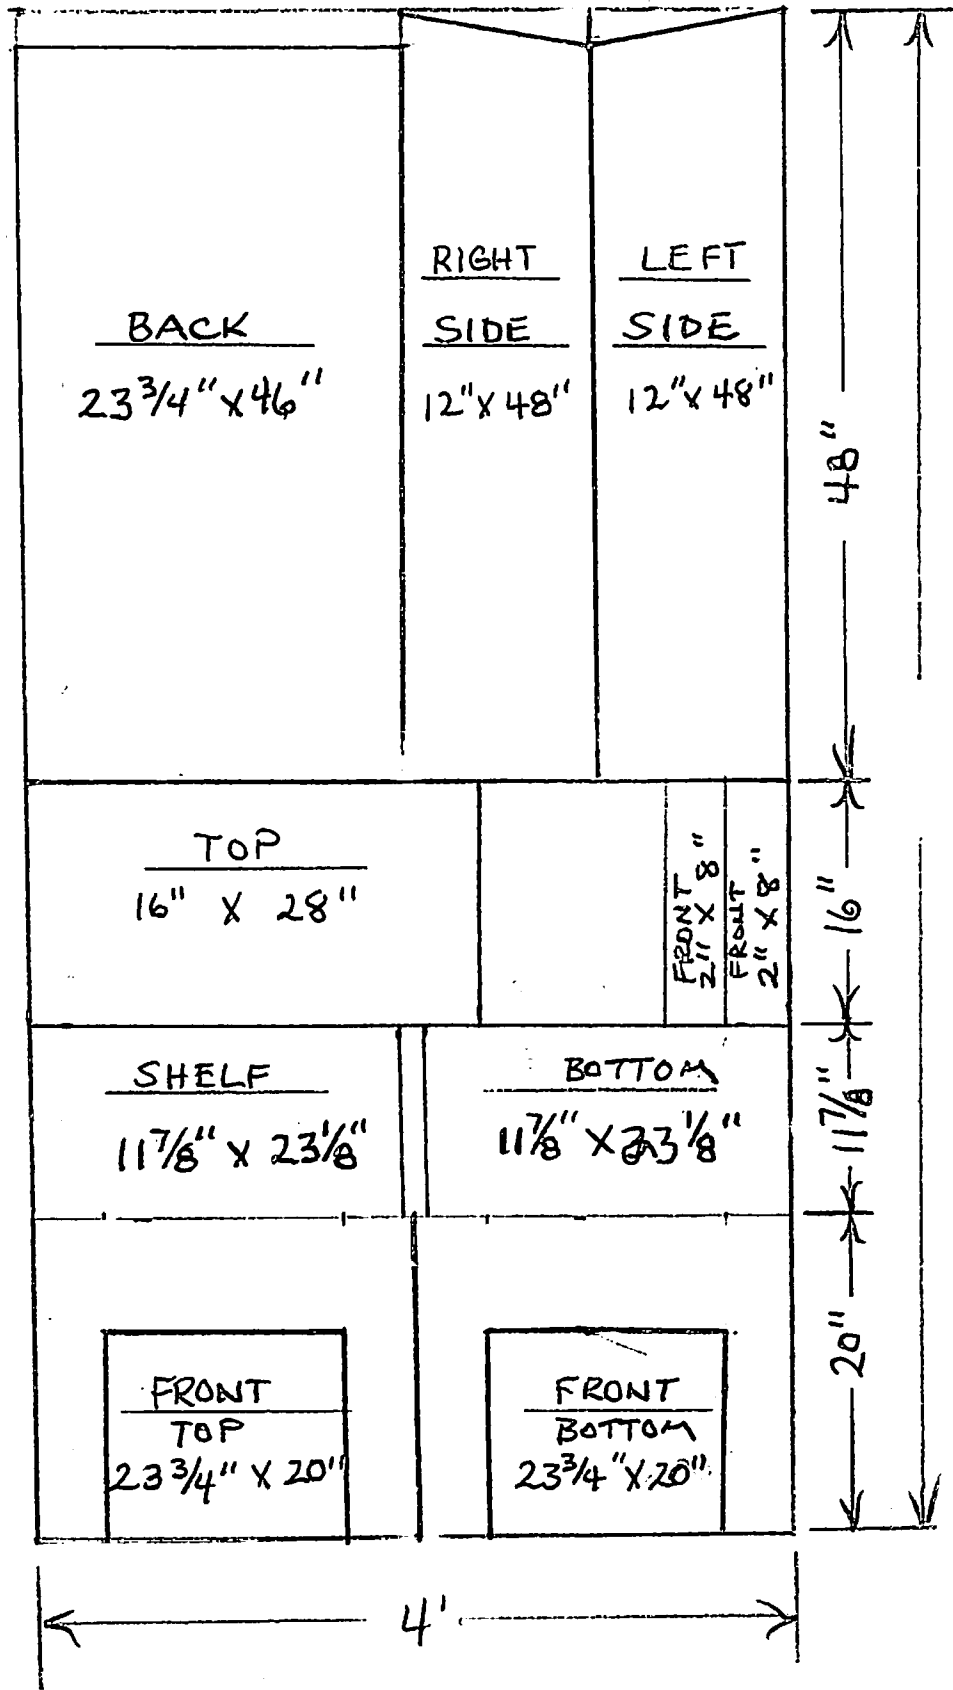

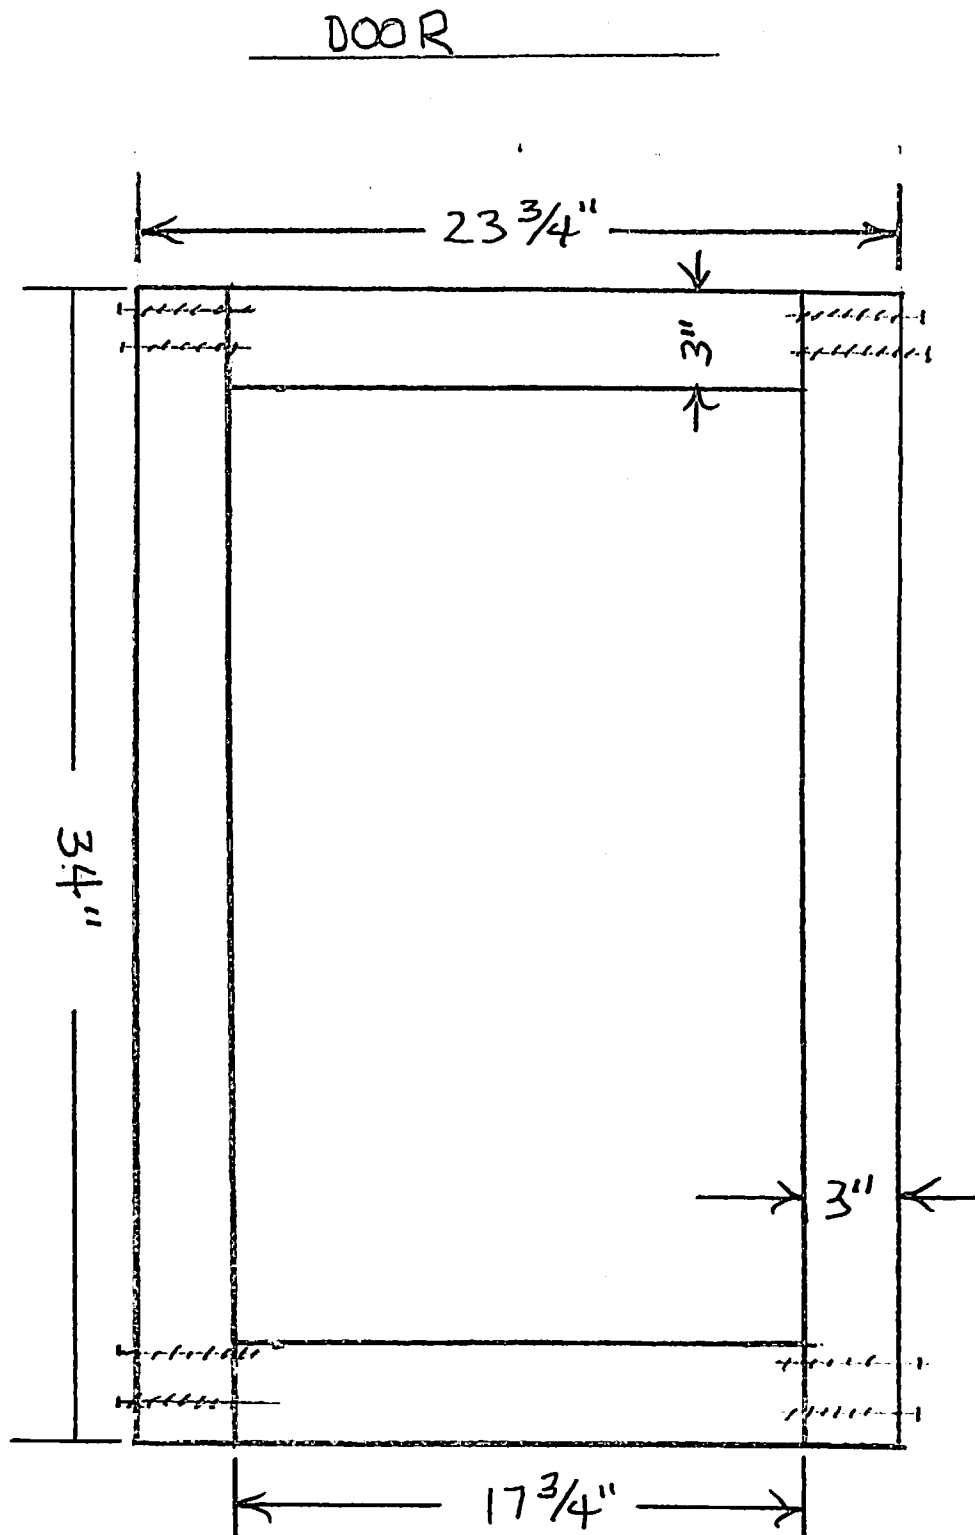

THERE ARE SEVERAL WAYS TO HOLD DOOR PIECES TOGETHER. THIS SHOWS USING 3 1/2" SCREWS

AFTER THE DOOR IS BUILT PAINT IT. WHEN THE PAINT DRIES THE PLEXI GLASS CAN BE HELD ON WITH A BEAD OF CLEAR SILICONE CAULK. THE PLEXI GLASS WILL OVERLAP THE DOOR OPENING BY 1" ON ALL SIDES.